

## Making and fitting your Chain Curtain – Code 200

Thanks for choosing our screen system.

We double check all orders before despatch, but we would ask you to ensure you have all the components as listed below. If any items are missing please call us on 01628 481919

**If you are unsure at any stage please contact us. We are always happy to help.**

### Contents:

Header Bar



Chain Link



2+ Brackets depending on the size of your curtain



Fixings:

4+ screws and matching number of rawl plugs depending on the number of brackets




### Tools required

- Tape measure & pencil
- Clamps
- Masking tape
- Flat headed screw driver
- Pliers

- Spirit level
- Power drill
- 2.5mm drill bit

## Step 1 – Making your curtain

- Place the header bar on a flat surface (bench, table or floor) with the back of the bar facing upwards as shown. Hold in place with clamps or by hand.

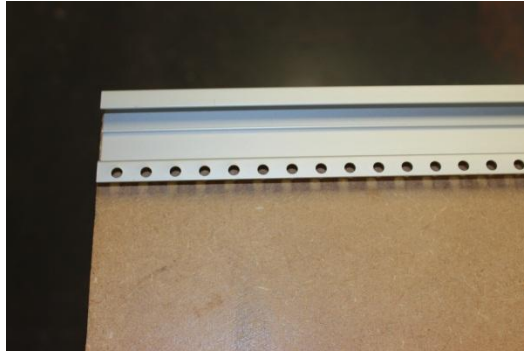

- Measure from the top of the header bar down to the total height dimension given when you ordered. Mark this point.



- You may wish to create a straight line using a piece of masking tape (or similar) parallel to the header bar to make it easier to measure the length of each strand of chain.



- Take the end of the chain and using a flat headed screwdriver twist the head to open up the first link.



- Insert the open link through the first hole on the header bar (from the underside).



- Extend the chain to the point you marked earlier ensuring there are no kinks along the length then open the link closest to your point and unhook the chain.



- You may find your link doesn't finish exactly at the required height so you will need to decide if you wish to finish the curtain slightly longer or shorter.

**NB:** If you decide to finish longer, ensure the curtain will not touch your threshold or floor and create a trip hazard. The strands of chain need to swing freely.



- Take the chain back to the header bar so that you can locate it in the next hole. Repeat this process until all holes have a chain attached.



- Close the top links on the header bar with your fingers or a pair of pliers.



## Step 2 – Hanging your curtain

- Using a 2.5mm drill bit Screwfix the brackets into position with the screws and rawl plug (if required) provided. You will need at least 10mm space above the bracket to ensure the curtain can be lifted on an off.



**YOUR INSTALLATION IS COMPLETE**